

FAT SHARK

ECHO

MODEL FSV1132-04

USER MANUAL



Revision A 01/17/2024

For more product information, please visit:

www.fatshark.com

All Rights Reserved

Headset Operation

- **Power Switch:** turn on and off the headset by pressing and holding the power switch.
- **AV IN:** After ensuring the device is turned on, connect the AV IN cable, and press the power button shortly to switch from RF reception mode to AV IN mode.
- **Battery Charging:** The battery in the headset is a standard 18650 2600mAh Li-ion cell, and can be charged with built-in charger by connecting a micro USB power supply to the headset.
- **Brightness and Contrast:** Slide the 5-way button left and right or forward and back for contrast and brightness adjustment.
- **Channel Selection:** Short press channel Up(CH+)/ Down(CH-) button to incrementally increase/decrease the channels. Long press and release the Up(CH+) button to change band; long press and release the Up(CH-) button to do auto scan active channel.
- **DVR Recording:** Vertically depress the 5-way button and listen for the short beep to start and stop recording video from the live feed. Long-press the 5-way button to enter the DVR menu and browse/play content. This DVR has no auto save recording file function, need to manually stop recording to save file.
- **Control Diagram:**



